START PURE®
PROFESSIONAL

www.StartPurePro.com

©2015 Start Pure, LLC. All Rights Reserved.

START PURE®
PROFESSIONAL

Pure Power™
Sonic Toothbrush

Operating Instructions
Model: SPP4000

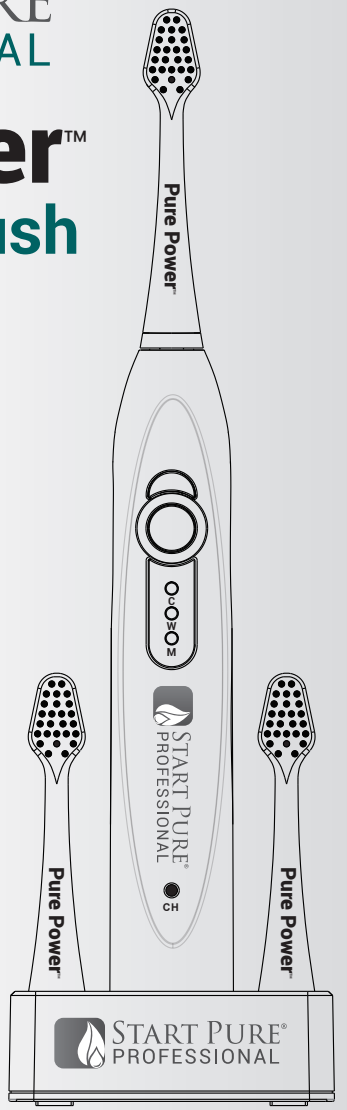

Questions? Contact
Start Pure® Professional
www.StartPurePro.com

Before operating this product, please read these instructions completely and save this manual for future use.

©2015 Start Pure, LLC. All Rights Reserved.

CONTENTS

IMPORTANT SAFEGUARDS.....1
WARNINGS.....1
WATER HAZARD.....1
VOLTAGE HAZARD.....1
MEDICAL WARNINGS.....2
CONFIGURATION.....4
GETTING STARTED.....5
HOW TO USE.....6
MAINTENANCE.....7
TROUBLESHOOTING.....8
DISPOSAL.....8

©2015 Start Pure, LLC. All Rights Reserved.

IMPORTANT SAFEGUARDS

The Start Pure® Professional Pure Power™ Sonic Toothbrush is safe and effective when used according to directions. Like any electrical appliance, however, basic safety precautions should be followed, especially when children are present.

READ ALL INSTRUCTIONS BEFORE USING PRODUCT:

To reduce the risk of burns, electrocution, fire, or injury to persons read and follow all warnings below:

⚠ WARNING

1. Use this product only for its intended use as described in this manual. This product is designed to clean your teeth, gums and tongue only. Do not use any attachments or brush heads other than those included with this item.
2. This product is not a toy. Children should use toothbrush only with adult supervision.
3. This toothbrush is a personal care appliance and is not intended for use on multiple patients in a dental office or institution.
4. If your toothpaste contains peroxide, baking soda or other bicarbonate (common in whitening toothpastes), thoroughly clean your brush head and handle to avoid weakening the plastic assembly.
5. Never operate this product if it has a damaged cord, plug or charger base. Do not use this product if it has been dropped, damaged, or dropped into water.
6. This product is not intended for use by persons (including children) with reduced physical or sensory capabilities unless with assistance by or under supervised guidance of an adult responsible for their safety.
7. Keep the toothbrush, charger base and power cord away from heated surfaces.
8. If you experience discomfort or pain in your mouth during use, discontinue use of this product and contact a dentist.
9. Do not attempt to remove the battery. This will permanently damage the product and void the warranty.
10. Do not clean the toothbrush in the dishwasher.
11. This appliance has a polarized plug (one blade is wider than the other).As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician.

©2015 Start Pure, LLC. All Rights Reserved.

⓬ Do not operate where aerosol (spray) products are being used without proper ventilation. This is a fire hazard.

⓭ This product does not contain any user serviceable parts please contact us if product no loner works or needs repair.

WATER

❶ Do not place or store the charger/base where it can fall or be pulled into any volume of water.

❷ Do not place or drop the toothbrush handle or charger/base into water or other liquid.

❸ Do not reach for a product that has fallen into water or other liquid. Unplug immediately.

❹ Do not use while bathing.

❺ Unplug charger/base before cleaning and assure that it is dry before plugging it into an electrical outlet.

VOLTAGE

This product complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

❶ Do not plug the charger/base into an outlet with a voltage other than specified on the bottom of the charger.

❷ This product is designed to operate within a range of 100-240 volts.

❸ Voltage converters do not guarantee compatibility.

❹ Do not force the plug into an outlet.

❺ If the plug does not fit easily into the outlet, discontinue use.

❻ The main cord cannot be replaced, if it is damaged discard charger.

❼ Do not use charger/base outdoors.

MEDICAL

❶ If you have had oral surgery or gum surgery within the past two months, consult your dentist prior to use.

❷ Consult your dentist if excessive bleeding occurs while using this product or if minor bleeding continues to occur after one week of use.

©2015 Start Pure, LLC. All Rights Reserved.

❸ Consult your physician or implant device manufacturer prior to using this product if you have questions concerning the combined use of this product with a pacemaker or other implanted medical device(s).

❹ Consult your physician prior to using the toothbrush if you have any medical concerns.

❺ The toothbrush has been tested and is certified as per ETL and C regulations.

❻ Never use while sleeping or drowsy.

SAVE FOR REFERENCE

©2015 Start Pure, LLC. All Rights Reserved.

CONFIGURATION

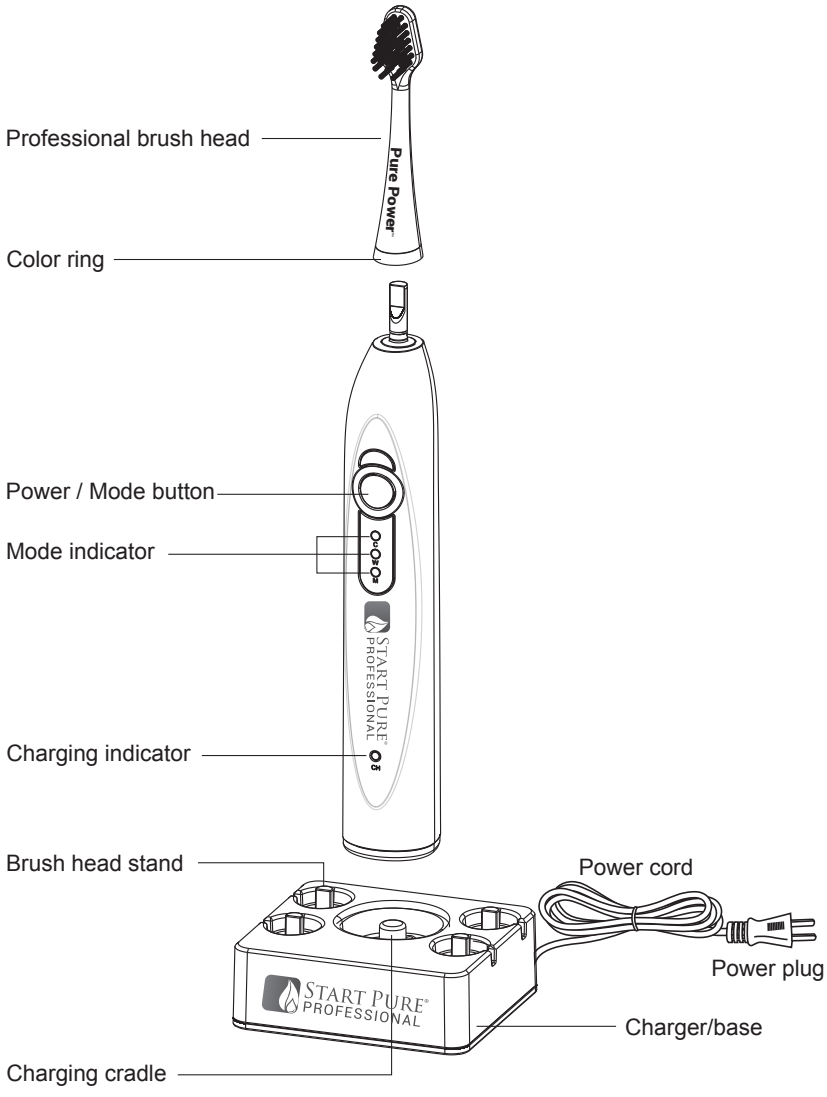

©2015 Start Pure, LLC. All Rights Reserved.

GETTING STARTED

Charging the toothbrush

Be sure to turn off the toothbrush before charging. Place the handle in the charger/base. The charging indicator will light up blue.

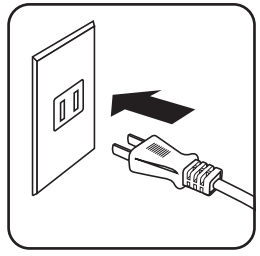

NOTE:

1. The toothbrush must be charged for 24 hours, if:
   a. this is the first time using the toothbrush;
   b. the toothbrush has not been used for more than three months;
2. It may take at least 24 hours to charge the battery fully. You can use the toothbrush before it is fully charged.
3. To keep the battery fully charged, we recommend that you keep the toothbrush in the charger/base when not in use.
4. During charging it is normal for the toothbrush to get warm.
5. The operating duration will become shorter as the battery gets old. If the toothbrush operates only for a short time (ex. single use) after being fully charged, this means that the battery is nearing the end of its life cycle. Contact us for support.

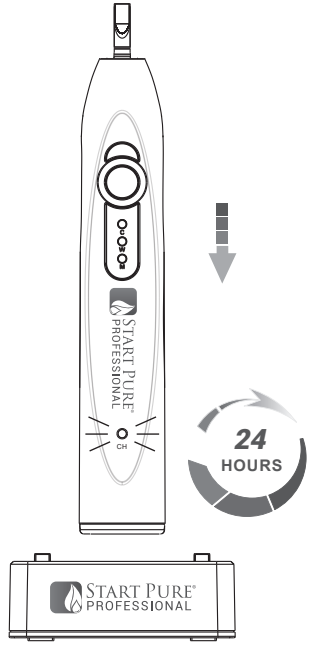

©2015 Start Pure, LLC. All Rights Reserved.

HOW TO USE

1. Slide the brush head onto the handle. Push brush head down fully until it locks into place. Note: There will be a small gap between color ring and the handle.(Fig 1)
2. Wet the bristles and apply a small amount of toothpaste.
3. Place the bristles against the teeth at a slight angle towards the gum line.(Fig 2)
4. Press the Power/Mode button to turn on the toothbrush. Toothbrush

   NOTE:
   During brushing, if Power/Mode button is pressed, toothbrush will enter next mode and start another 2 minute cycle and the mode indicator will light up. The function of each button press is: (1) power on at cleaning mode, (2) whitening mode, (3) massaging mode and (4) power off automatically enters Cleaning mode.

   a. Mode 1-Power on / Cleaning: Standard mode for superior teeth cleaning.
   b. Mode 2- Whitening: Teeth cleaning with polishing and whitening.
   c. Mode 3- Massaging: Pulsates for gentle gum stimulation.
   d. Power off
5. Apply light pressure and gently move the brush head slowly across the teeth in small up & down and circular motions.

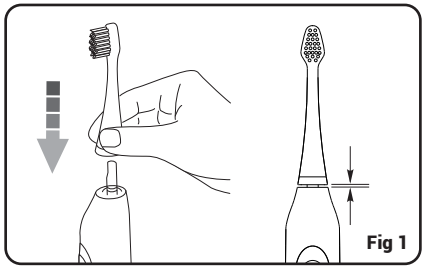
Fig 1

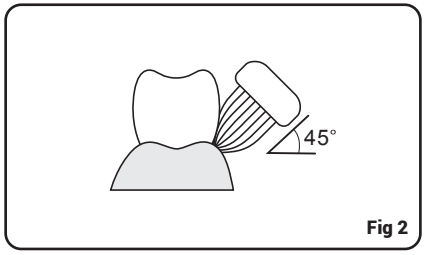

Fig 2

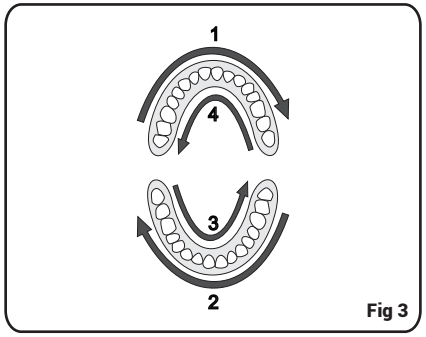

Fig 3

6. In order to maximize cleaning effectiveness, divide your mouth in 4 sections. Start with Section 1 and brush for 30 seconds then continue onto the next section. The toothbrush's brushing action will pause between each 30 second interval, indicating when to move on to the next section. The toothbrush will automatically stop after 2 minutes of use. (Fig 3)
7. Pull brush head off of the toothbrush when finished. (Fig 4)
8. Rinse both the brush head and handle tip under running water then wipe dry. **Do Not Submerge** handle into water. (Fig 5)
9. Reinstall the brush head. Place the toothbrush back onto the charger/base.

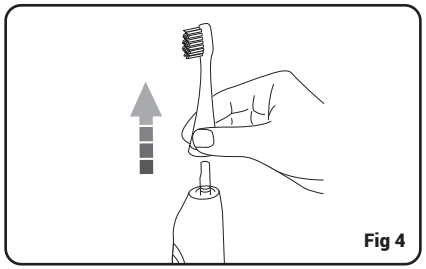
Fig 4

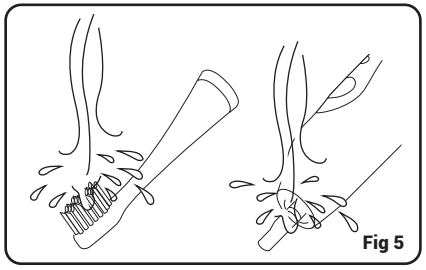
Fig 5

Your Pure Power™ toothbrush is safe to use on braces and dental restorations (Fillings, Vaneers, Crowns, Implants). Consult your dentist prior to use. Brush head bristles may wear down faster when used on braces.

MAINTENANCE

Be sure to remove the plug from the electrical outlet before cleaning the product.

Toothbrush

1. Remove the brush head.
2. Wipe all surface areas with a damp cloth and place the handle back into the charger/base. **Do Not submerge** the handle into water. (Fig 6)
3. Rinse the brush head and bristles after each use. (Fig. 5)
4. **DO NOT** clean in the dishwasher.

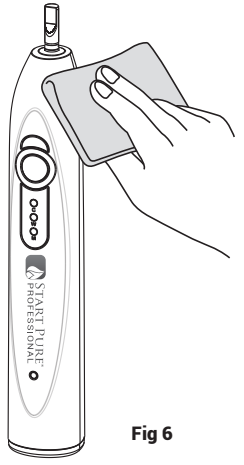

Fig 6

©2015 Start Pure, LLC. All Rights Reserved.
©2015 Start Pure, LLC. All Rights Reserved.

Charger/Base

1. Using a damp soft cloth, clean all surfaces of the charger/base. Do not use damp cloth on plug. (Fig 7)
2. Clean the plug with a dry dust cloth periodically to ensure it remains in good working order. The accumulation of dust or dirt on the plug can cause an electric shock, overheating or fire.

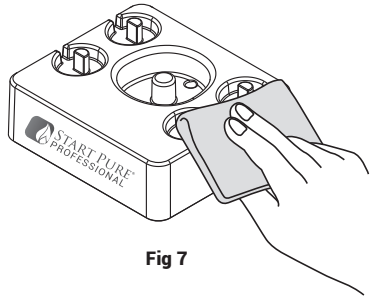

Fig 7

TROUBLESHOOTING

Problem	Possible Cause	Solution
The toothbrush doesn't work.	You have just purchased the product or it has not been used for more than 3 months.	Charge the main unit for at least 24 hours.
Weak or diminished vibration.	The toothbrush is pressed too hard against your teeth.	Place the brush head gently against your teeth.
The toothbrush operates only for a short period of time even immediately after being charged.	Charging time was insufficient.	Charge the main unit for at least 24 hours.
	The battery has reached the end of its life cycle.	Contact us for support.

If troubleshooting steps do not resolve issue please contact us for support.

DISPOSAL

The power source of this Pure Power™ toothbrush is a nickel-metal hydride rechargeable battery which can be recycled. At the end of the product's life, always remove the battery before you discard the product, and recycle or dispose of the battery according to local waste management requirements. If you have recycling questions, contact your local waste management office.

REMOVING AND RECYCLING THE BATTERY

Do not disassemble the product at any time other than when disposing of it. Doing so earlier will destroy the product and void all warranties. Observe basic safety precautions. The appliance must be disconnected from electrical supply prior to removing the battery.

1. Before removing the battery, be sure to completely drain the unit of power.
2. Use a screwdriver to remove the screw cover and battery door. (Fig 8)
3. Hold the handle upside down, press the toothbrush shaft, and remove the two hooks to release the internal components of the handle. (Fig 9)
4. Insert the screwdriver next to the battery connections, and twist to break the connections. Remove the circuit board and pry the battery from the plastic carrier. (Fig. 10)
5. Recycle or dispose of the battery properly. Ask your local waste management office if they accept the remaining toothbrush components for recycling.

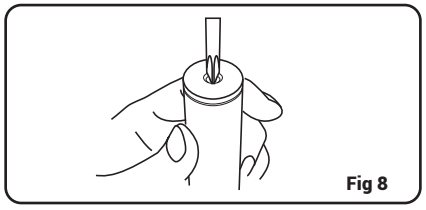
Fig 8

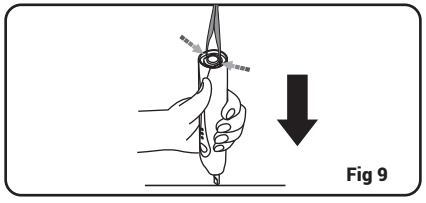
Fig 9

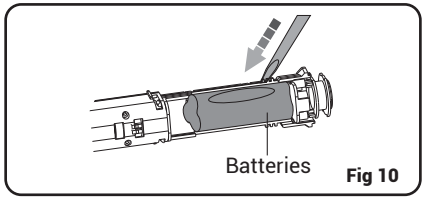

Fig 10

Be careful not to short-circuit the negative and positive poles of the battery (do not touch any metal object to both terminals at the same time). Do not attempt to connect the appliance to an electrical supply after you have removed the battery.

©2015 Start Pure, LLC. All Rights Reserved.
©2015 Start Pure, LLC. All Rights Reserved.

Limited Product Warranty

Start Pure® Professional warrants this device to the original purchaser or original user against defects in materials and workmanship as based on the date of original purchase ("Warranty Period") from an Authorized Dealer. The original sales receipt showing the product name and the purchase date from an authorized retailer must be retained and is considered such proof. Start Pure® Professional warrants this device under normal use for a period of One (1) year from the date of retail purchase.

The Start Pure® Professional warranty covers new products if a defect in material or workmanship occurs and a valid claim is received by Start Pure® Professional within the Warranty Period. At its discretion, Start Pure® Professional will either (1) repair the product at no charge using new or refurbished replacement parts or (2) exchange the product with a product that is new or has been manufactured from new, or serviceable used parts and is at least functionally equivalent or most comparable to the original product in Start Pure® Professional current inventory.

Start Pure® Professional warrants replacement products or parts provided under this warranty against defects in materials and workmanship from the date of the replacement or repair for ninety (90) days or for the remaining portion of the original product's warranty, whichever provides longer coverage for you. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes Start Pure® Professional's property.

THIS WARRANTY DOES NOT COVER

- Damaged product caused by misuse, abuse, alterations, unauthorized repair, use of unauthorized replacement parts or neglect.
- Brush heads.
- Normal wear and tear damage including scratches, discoloration, fading, chips or abrasions.
- Shipping charges to and from Start Pure® Professional.
- Damage from mishandled shipments, lost shipments or transit accidents to and from Start Pure® Professional.
- Damage from use for commercial or institutional purposes.
- Failure to operate per User Manual.

Please register your device online to ensure warranty confirmation.

For warranty information, registration and support visit
www.StartPurePro.com

©2015 Start Pure, LLC. All Rights Reserved.

IMPLIED WARRANTIES

ANY IMPLIED WARRANTIES, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTIES SET FORTH ABOVE. LIMITATIONS ON DURATION OF IMPLIED WARRANTIES DO NOT APPLY IN CERTAIN STATES.

LIMITATION OF REMEDIES

IN NO EVENT SHALL START PURE® PROFESSIONAL, ITS PARENT COMPANY, OR ANY OF ITS AFFILIATED OR SUBSIDIARY COMPANIES BE LIABLE FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES BASED UPON BREACH OF WARRANTY, BREACH OF CONTRACT, NEGLIGENCE, MISUSE OF PRODUCT, TORT, OR ANY OTHER LEGAL THEORY. SUCH DAMAGES INCLUDE, WITHOUT LIMITATION, LOSS OF SAVINGS OR REVENUE; LOSS OF PROFIT; LOSS OF USE; LOSS OF LIFE; THE DENTISTS AND DENTAL HYGIENISTS; AND COST OF ANY SUBSTITUTE EQUIPMENT OR SERVICES. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES.

Follow us

/StartPurePro

©2015 Start Pure, LLC. All Rights Reserved.